

Settings		Component		Layer		Utilities	
OR tho mode (N)	OR	Component Place (=)	CP	laYer Current (=)	YC	ConverT files	CT
OA tho Angle (A V D)	OA	Insertion Point	IP	laYer Display (=)	YD	ME asure	ME
CU rsor size	CU	Grip Component points	GC	laYer Hide (=)	YH	Measure D istance	MD
CK ursor Kolor	CK	Component Create	CC	laYer Name (=)	YN	B atch/macro D ebugger	BD
CF ursor Free (N)	CF	Comp. siZe scale (N =)	CZ	laYer Erase (=)	YE	M acro Assign to F-keys	MA
XC Restrict Cursor	XC	Comp. R otation (A V N)	CR	All Layers Edit (N)	AL	L oad B atch	LB
GS Grid Size (D)	GS	Component D ump save	CD	Snap all laYers (N)	SY	S ave B atch	SB
GO Grid reOrigin	GO	Component L oad	CL	laYer chanGe (=)	YG	B atch Selective save	BS
BP Base Point set	BP	Component eX purge (=)	CX	laYer R otate (A V =)	YR	B ezier to A rcs	BA
DO Drawing reOrigin	DO	Comp. N ew replace (=)	CN	laYer siZe rescale (=)	YZ	A rc to B ezier	AB
DC Display Coordinate	DC	Component E xplode	CE	laYer L oad (=)	YL	W in conVert lines to arcs	WV
PR oints Reference	PR	Component L oad	CL	laYer S ave (=)	YS	D rawing K lean	DK
PC oints Construction	PC	Comp Image exploded	CI	L ayer M anager	LM	W indow K lean	WK
PS oints Standard	PS	eX ploded LaYer mode	XY	Auto Dimensions		P ack D ata	PD
OD Object Drag ghost	OD			L inear eX tension	LX	D efinitions U nload	DU
RB RubberBanding	RB	Component Q uery list	CQ	A ngular eX tension	AX	S election by	SE
HI Highlight selections	HI	Zooms		A ligned 1	A1	W indow s ort	WO
CS Color Settings (N)	CS	Z oom A ll (N)	ZA	H orizontal 1	H1	O bject I nformation	OI
DI splay settings	DI	Z oom W indow (N)	ZW	V ertical 1	V1	E ntity F ilter	EF
FA st redraw settings	FA	Z oom P revious (N)	ZP	R adial by entity	RX	F ile P aths	FP
GR id display	GR	Z oom I n (N)	ZI	R adial by center Pt	RY	S hell out to executable	SH
NF Numeric Format	NF	Z oom O ut (N)	ZO	d iameter by entity	IX	L oad F ont	LF
Units »	US	P An (N)	PA	d iameter by center Pt	IY	S ave F ont	SF
Unit Settings	US	Z oom U p (N) pick center	ZU	L Eader text first	LE	W indow T ext	WT
Inch		Z oom B ack (N) pick center	ZB	L eaDers pick first	LD		
Feet		R edraw D isplay (N)	RD	s houLder Length (N =)	LL		
Feet/Inch		B ackward R edraw (N)	BR	P roximity F ixed	PF	H elp	
Millimeter		Z ooM value (N)	ZM	a Uto dimension M ode	UM	Q uery C ommand list	QC
Centimeter		Z oom L imits (N)	ZL	a Uto dim. S ettings (N)	US	F ile B ugreport/suggestion	FB
Meter		S et zoom L imits	SL	a Uto dim. m ove	UV	E -mail T ech support	ET
Decimals		Z oom V iew (N)	ZV	a Uto dim. c hanGe	UG	A bout G eneral C ADD P ro »	
DV Decimal Value	DV	N ame V iew	NV	a Uto dim. l aYer	UY	H Elp [F1]	HE
FV Fractions	FV	N amed view eX purge	NX	D im. Q uery settings	DQ		
FV Fractional Value	FV						
MO Manual entry Origin (N)	MO						
MR Manual entry Relative(N)	MR						
MB Man'l entry Basepoint(N)	MB						

Copyright©Noel H.Browning 2002
File: Commands.doc Draft: 11/01/02

Tool Bars »

- Main
- Draw
- Snap

- Prompt Line 1
- Prompt Line 2
- Prompt Line 3